 
 


GETTING STARTED

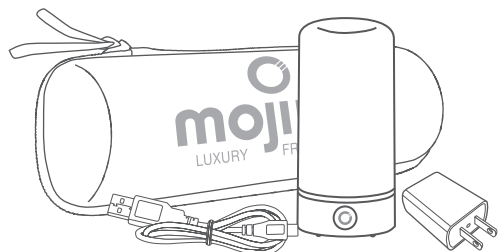


The contents of your Moji package include a Moji device, wall charger, micro-USB charging cord, and travel case.

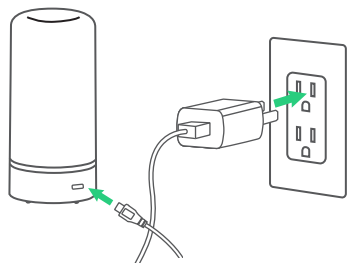


Your device comes partially charged so you can use it immediately. To fully charge your device, use the included charging cord. Please allow **4-6 hours** for a full charge. Always use the included wall charger to charge your Moji. Your device can be used as a portable unit once charged, or it can be used while plugged in.

When you first plug in your Moji device to charge, the power button will blink 3 times and stop, indicating the device is charging. A constant blinking light indicates the battery is low and needs to be charged.


INSERTING A FRAGRANCE POD OR ESSENTIAL OIL POD

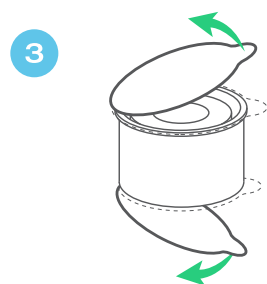


Once you've selected a pod, peel off and discard the top and bottom foil seals.

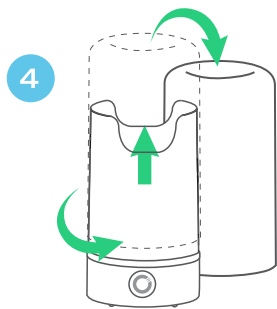

Twist and remove cap from the Moji device.

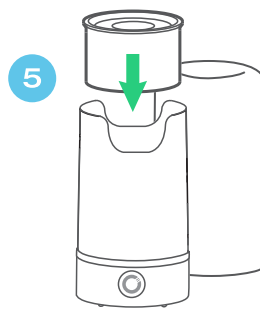


Insert pod (plastic cup with wood core) into the Moji device.

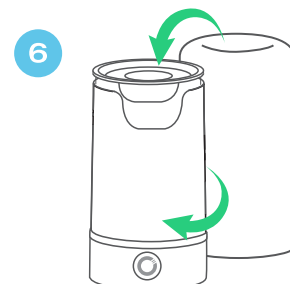

Replace the cap. Twist cap to lock into place, ensuring that it is securely on the device.

OPERATING YOUR MOJI DEVICE

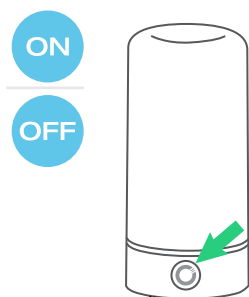

Turning the Moji device on and off is as simple as pressing and holding the power button for **3 seconds**.




When you first turn on the device, it is in **MANUAL** mode and the power button light and LED light band are blue.



To switch to **APP** mode, press the power button again. The light will then change from blue to white.

OPERATING YOUR MOJI DEVICE IN MANUAL MODE

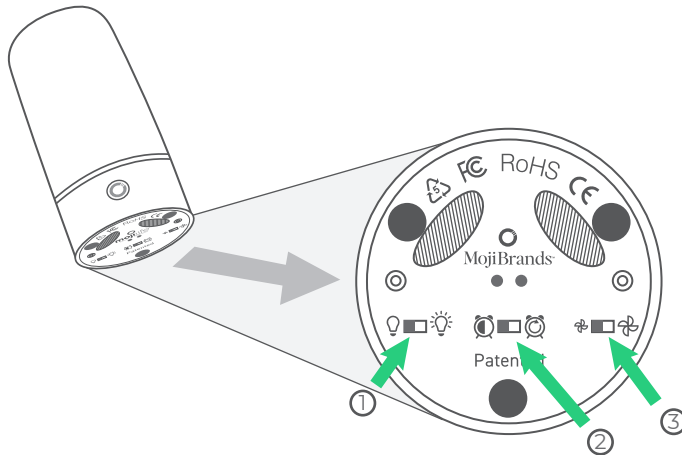


Once the Moji device is powered on and in manual mode (default mode), you can control the LED light band, fan interval, and fan speed settings using the switches located on the bottom of the device.

- 1) To turn on the LED light band, toggle the switch to the right. To turn off the light band, toggle the switch to the left. The LED light band color and brightness can be customized in app mode.
- 2) Two fan intervals are available. Toggle the switch to the left to operate repeatedly for 30 minutes on and 30 minutes off, or toggle to the right to have the device stay on continuously.
- 3) There are two fan speeds available. Toggle the switch to the left for low speed and to the right for high speed.

OPERATING YOUR MOJI DEVICE IN APP MODE

DOWNLOADING THE APP

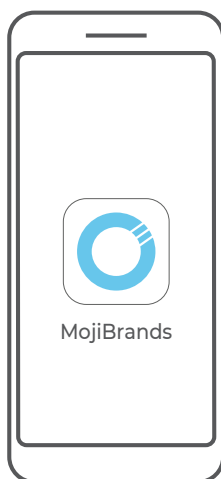

- Go to the App Store (IOS) or Google Play (Android) on your phone.




- Search for “**MojiBrands - The Moji**”, select and install the app.
- The app will download and you will be able to open it from the icon on your phone.

Please note that any existing apps currently available in the Apple App Store or Google Play Store will not operate this version of the Moji. Downloading other Moji applications will not allow the device to connect or function properly. When searching the app stores, please look specifically for the application titled “MojiBrands - The Moji.”


OPERATING YOUR MOJI DEVICE IN APP MODE (continued)

IMPORTANT: Make sure your device is plugged in, turned on, and in APP mode before proceeding. (Press and hold the power button to turn on and then press a second time to enter APP mode. The power button light on the device should be white.) Also, make sure your phone has Bluetooth enabled (see your phone settings).



Launch the **MojiBrands – The Moji** app and click the “Add your Moji” button. The app will search for the device. Click “Connect” to pair your Moji. Give your device a name (i.e., Living room) for easy identification.

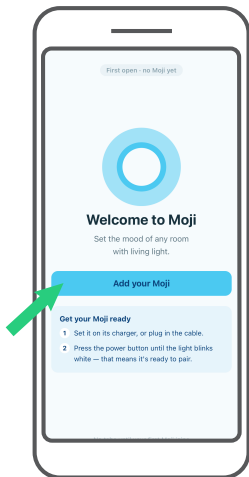


You will then have the option to customize the LED light band on your device. Simply drag the white circle on the color band to choose the color you like. You will see the color changing on your device in real time. Adjust the brightness to your desired level.

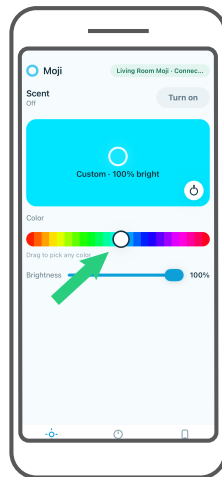

Next, click on the Schedule icon at the bottom of the screen and adjust the days and times if you desire. Save your changes.

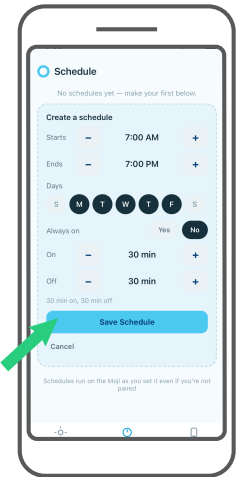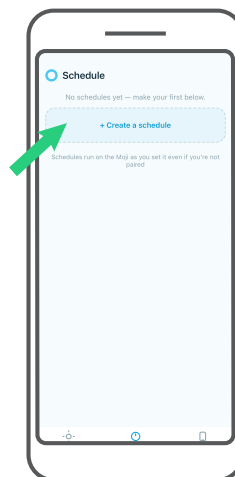

Click on the Devices icon on the bottom to see your paired Moji devices. If you have more than one listed, you can click on “Identify” and the light on the device will blink.

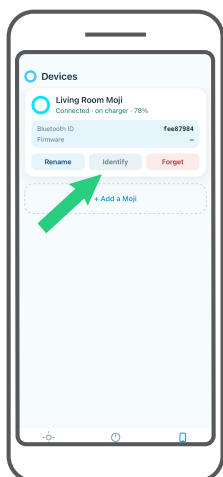

Congratulations! Your Moji device is now ready to use. Note: You may add multiple devices to the app, though only one device can be actively programmed at a time. Also, you must be within approximately 20 feet of your device to ensure a strong connection. If you receive a "time out" or "Bluetooth is disconnected" message, please move closer to the device and try connecting again. Once your device is connected and personal settings saved, it will retain your programming regardless of your proximity to the device.

For additional technical support, please contact MojiBrands at service@mojibrands.com.

WARRANTY:

MojiBrands, LLC warrants that the products purchased will be free from defects in workmanship and materials for **one (1) year** from the date of purchase. This Limited Manufacturer's Warranty applies under normal use during the warranty period.

EXCLUSIONS:

The warranty does not apply in the event of misuse, abuse, normal wear and tear of the product(s), or as a result of unauthorized alterations or repairs. The warranty is void if the product(s) is disassembled or altered in any way or used in a manner contrary to instructions as outlined in the user manual.

SUBMITTING A WARRANTY CLAIM:

To submit a warranty claim, please email us at: **service@mojibrands.com**. Include the following: your order number, a detailed description of the issue, and photos or videos showing the defect. If your claim is approved, you will be required to return the device, along with the charging cord and plug, to MojiBrands, LLC for processing. Customers are responsible for return shipping costs to MojiBrands, LLC. Proof of purchase is required for all warranty claims.

Once the product is received and the issue is verified, MojiBrands, LLC will, at its sole discretion, repair the product or replace with a new or refurbished unit. The replacement product will be shipped back to the original purchaser at no addition charge.

DISCLAIMERS:

The Moji device is an electronic device and is not to be operated in or around water. Do not block the airflow at the base of the Moji device (e.g., setting it in carpet). Any damage to a device caused by water or blocked airflow will cause the warranty to be null and void.